

# RF COAXIAL ADAPTERS

## FEATURES

- RF ADAPTERS
- CONNECTORS TYPES:  
BNC, N, 7/16, 7/8, 1+5/8, 3+1/8.



Model	Article description	IN	OUT
<b>ANMBNCF</b>	Adapter N male - BNC female	N-m	BNC-f
<b>ANFF</b>	Adapter N female - female	N-f	N-f
<b>ANMM</b>	Adapter N male - male	N-m	N-m
<b>ANFFFT</b>	Adapter "T" N female - female - female	N-f	N-f
<b>ANFMM</b>	Adapter "T" N female - male - female	N-m	N-f
<b>A716MNF</b>	Adapter 7/16 male - N female	7/16-m	N-f
<b>A716MNM</b>	Adapter 7/16 male - N male	7/16-m	N-m
<b>A716FNM</b>	Adapter 7/16 female - N male	7/16-f	N-m
<b>A716FNF</b>	Adapter 7/16 female - N female	7/16-f	N-f
<b>A716FF</b>	Adapter 7/16 female - female	7/16-f	7/16-f
<b>A78NFI</b>	Adapter 7/8 - N female with Inner	7/8	N-f
<b>A78716FI</b>	Adapter 7/8 - 7/16 female with Inner	7/8	7/16-f
<b>A78716MI</b>	Adapter 7/8 - 7/16 male with Inner	7/8	7/16-m
<b>A7878I-90</b>	Adapter 7/8 - 7/8 , 90° with Inner	7/8	7/8
<b>A158NFI</b>	Adapter 1+5/8 - N female with Inner	1+5/8	N-f
<b>A15878I</b>	Adapter 1+5/8 - 7/8 with Inner	1+5/8	7/8
<b>A158158I-90</b>	Adapter 1+5/8 - 1+5/8 , 90° with Inner	1+5/8	1+5/8
<b>A318158I</b>	Adapter 3+1/8 - 1+5/8 with Inner	3+1/8	1+5/8